


Miele

ESW 7010

14 cm high gourmet warming drawer without handle for preheating crockery, keeping food warm and low temperature cooking.

Low temperature cooking
4 functions
Touch control
Push2open drawer
Timer function with automatic switch-off
Pre-heating crockery
Keeping food warm
Perfect cooking results at low temperature
Cup and Plate warming
6 place settings
Control panel with sensor controls
Fully telescopic runners

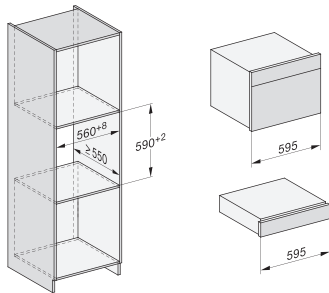

External Dimensions

- ↑ H 140 mm
- W 595 mm
- ⊙ D 560 mm